

**SPARE PARTS LIST- MODEL REVAC/REVAC-UL**

	<b>PART NO.</b>	<b>DESCRIPTION</b>
1	4CR-1-785	Start Relay
2	B02013	Rubber Spacer
3	NC50FLOAT	Float Switch for 30 and 50 lb. Tank
4	R01113	Operating Instructions
5	R03004A	Suction Pressure Regulator
6	R03010	3/8" Check Valve
7	R03024	High Side Gauge
8	R03025	Low Side Gauge
9	R03042	Handle with Cleats
10	R03045	2 Row Recovery Coil
11	R03046	3/8" Ball Valve
12	R04062	Grill-12 X .051 Flat
13	R04070	Control Panel
14	R04071	Chassis (Bottom)
15	R04072	Cover (Top)
16	R06013	Leg Oil-Less
17	R07007	High Pressure Switch
18	R07009	Relay NO & NC (UL ONLY)
19	R07010	Cord to Float (UL ONLY)
20	R07012	Lamp, Indicating (UL ONLY)
21	R07020	Solenoid with Coil
22	R07022	Condenser Fan
23	R07023	Harness, Power
24	R07024	Harness, Solenoid
25	R07025	SPST Switch Power
26	R07026	SPDT Switch (Purge)
27	R07064	Start Capacitor
28	R07074	Compressor Oil-less
29	SG38	3/8" Liquid Sight Glass

**Note: Please tell us model number and serial number when ordering spare parts.**